

# Changing Drum Units

(MX710, MX810, MS 710, and MS810)

Changing your drum unit is one of the most important things for a user to know. Lexmark devices use drum units that last for quite a long time. However, they do not last forever. That is why it is important for users to know how to change them and ensure that there is no hiccup in office productivity.

## Changing the Drum Unit:

1. Open the front door using the handle located just below the 'Lexmark' logo.
2. Use the handle to slide the toner cartridge out of the machine.
3. Use the green handle to pull out the drum unit.
4. Slide the new drum unit deep inside the device until you feel it lock.
5. Re-insert to toner cartridge into its place on top of the drum unit.
6. Close the door once you have finished.

